

Interface module

 


MIM-B02


- Components



Interface module



12VDC
Power cable

 


F1-F2
Comm. wire

- MIM-B02

Power connector
(12VDC, from outdoor unit)

Communication connector
(F1/F2)

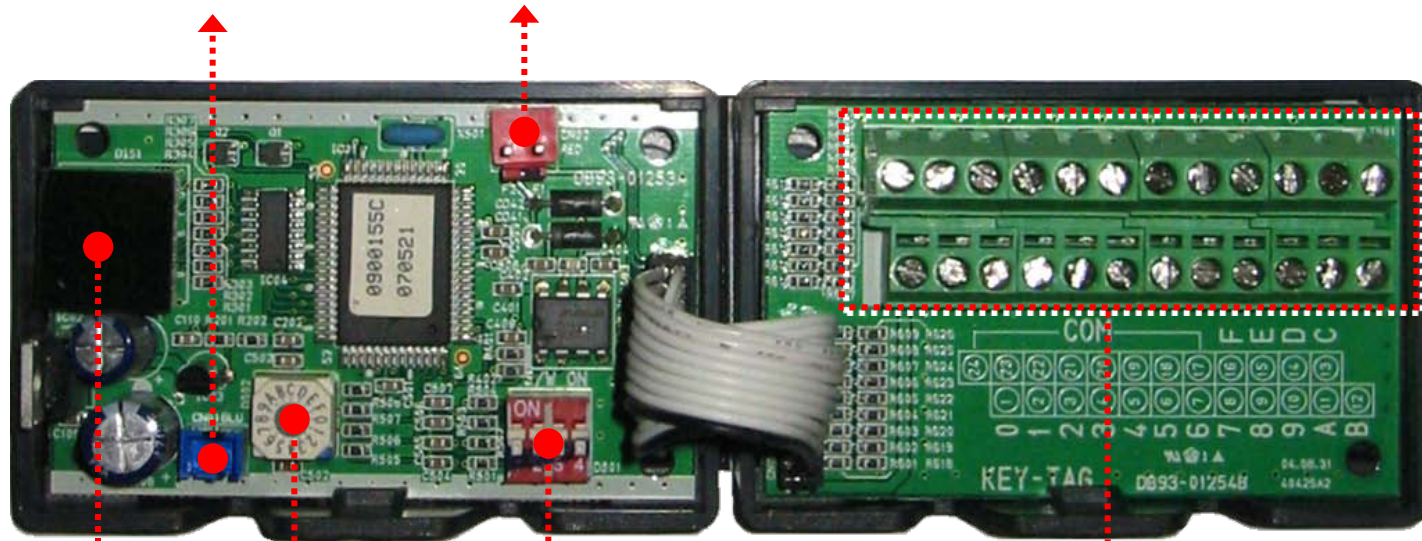


Address switch
(no function)

Option switch


Control input contacts

State display segment

- Dimensions

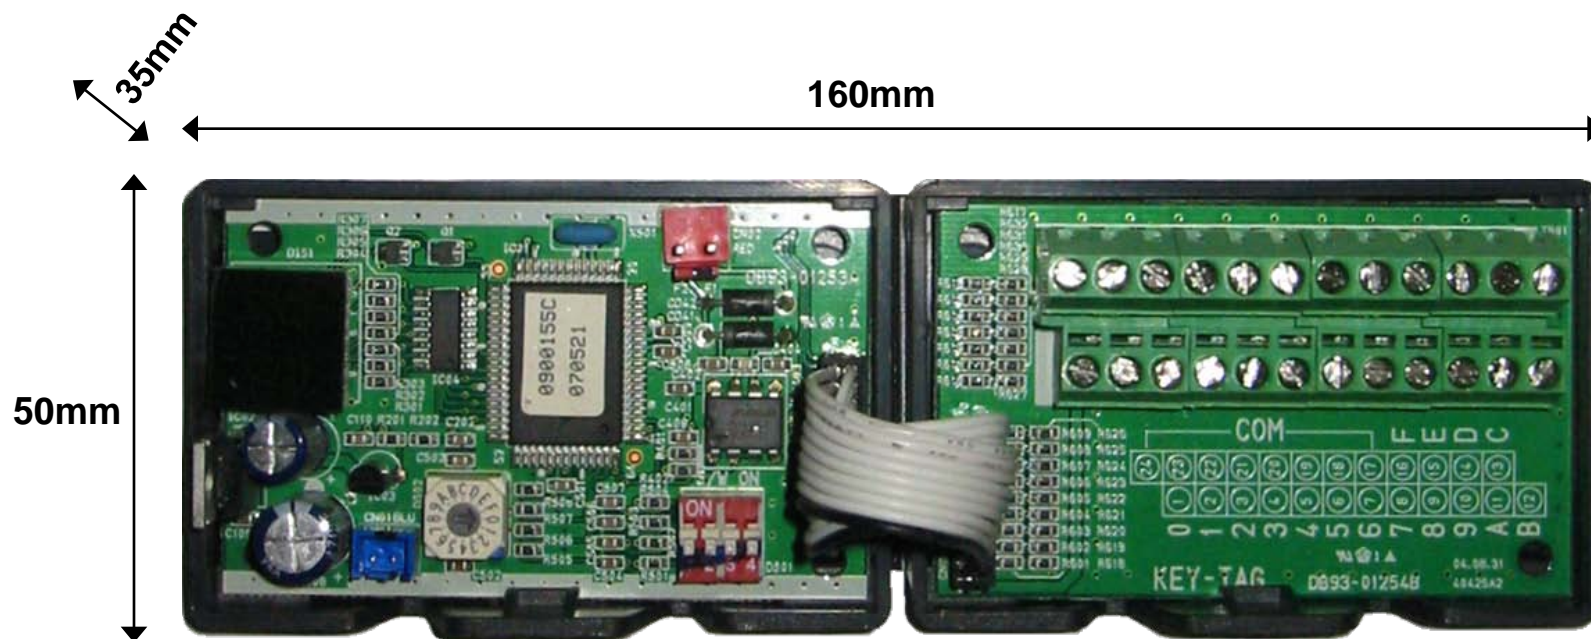

- Control input contacts

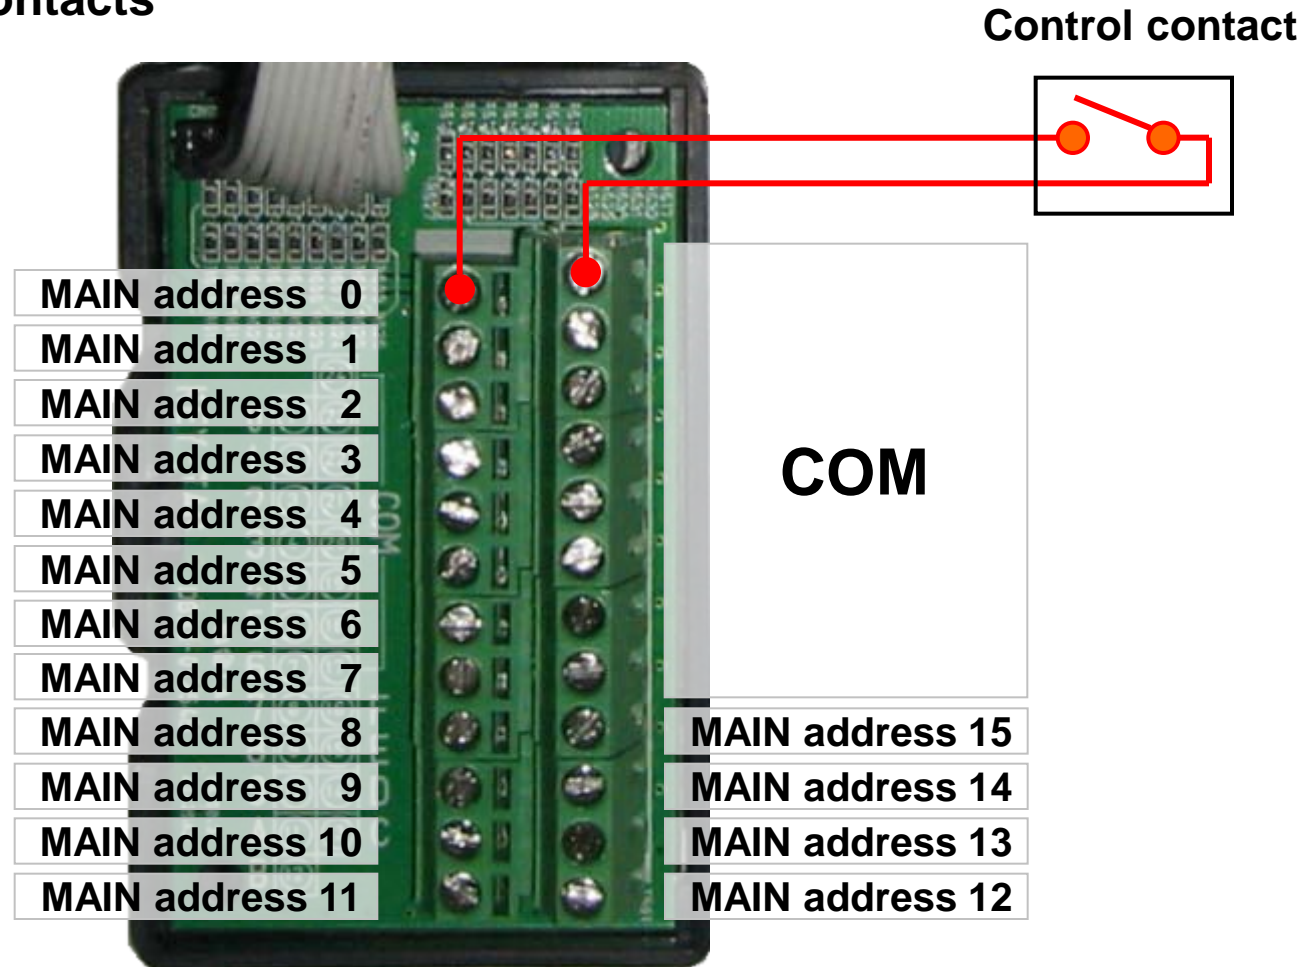

NOTE

Short-circuit MAIN address 0-COM to control the indoor unit of MAIN address 0.
Contact inputs must be no-powered. Otherwise, PCB can be damaged due to voltage contending.

- Installation




Interface module MIM-B02

- Installation location
: Inside outdoor unit


Contact interface module – MIM-B02

- Installation (DVM Plus III (HR))

DVM Plus III (HR)

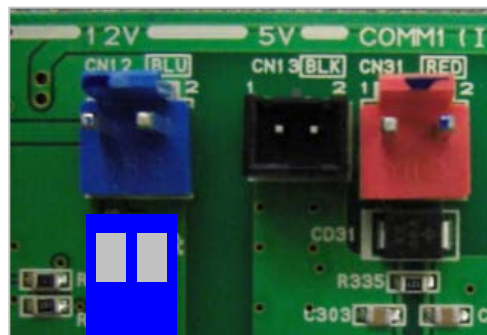

12VDC

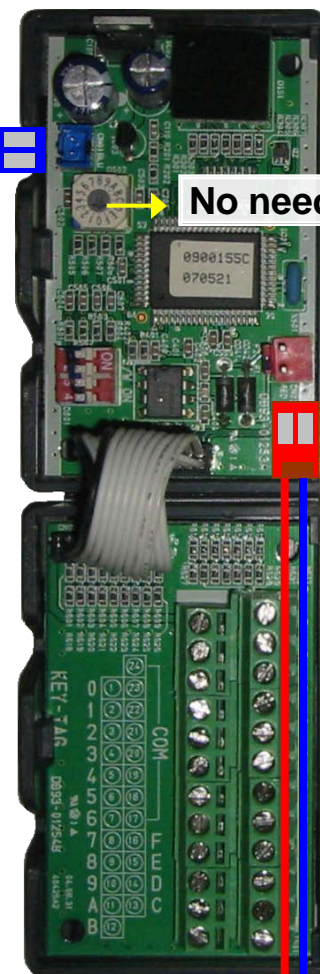


No need to set

Power supply



Communication

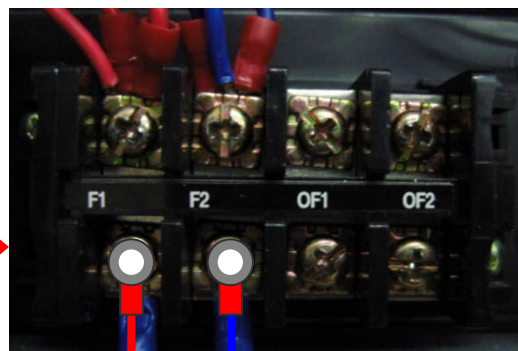

F1-F2

NOTE : No need to connect (black) 5VDC from the outdoor unit PCB


- Option switch

DIP Switch		Function	DIP S/W
K1	ON	K3=ON Contact Close → Indoor unit OFF, Wired remote control disabled Contact Open → Indoor unit OFF, Wired remote control enabled	<div style="text-align: center;"> K1 K2 K3 K4 ON </div>
	OFF		
	ON	K3=OFF Contact Close → Indoor unit ON, Contact Open → Indoor unit OFF	
	OFF		
K2	ON	Key-Tag I/M used only (DVM, DVM Plus, DVM Plus II, HR/HR II, FJM)	
	OFF	Central I/M and Key-Tag I/M used together (DVM 8/10HP, DVM HR/HR II)	
K3	ON	OFF operation only	
	OFF	ON/OFF operation both	
K4	ON	First contact state ignored after power reset. (For indoor units supporting automatic restart)	
	OFF	Operation depending on the first contact state after power reset. (for indoor units not supporting automatic restart)	

※ K4 has no function when K3 is set to ON.

Contact interface module – MIM-B02

- Contact wiring length

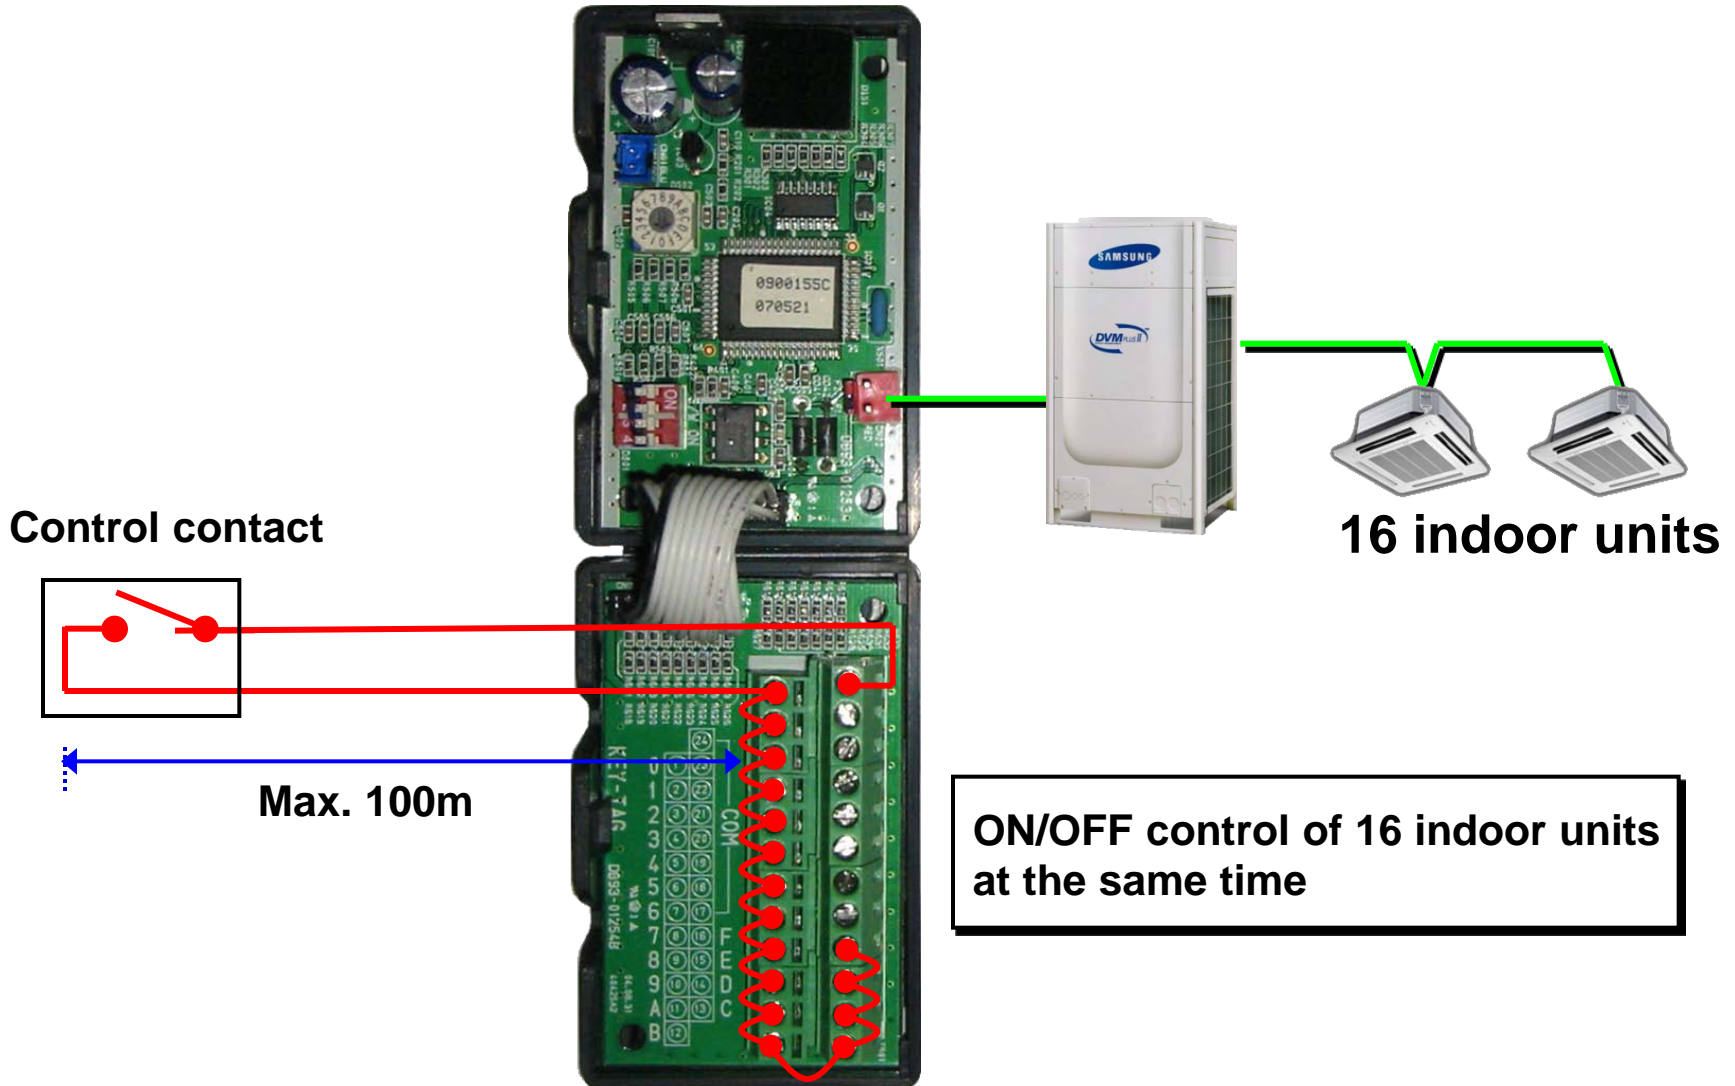


Contact interface module – MIM-B02

- State & error display




F1-F2 communication state (indoor/outdoor unit)

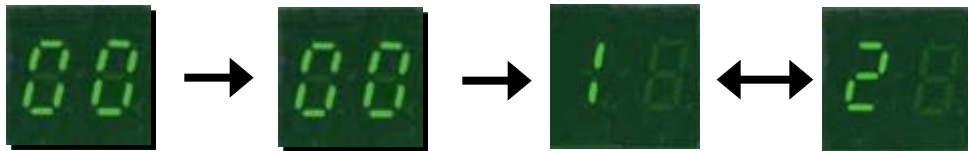

Power input → During registration → Registration completed (IDU MAIN address)

Note : No need to set K2 of indoor units to OFF for MIM-B02 control

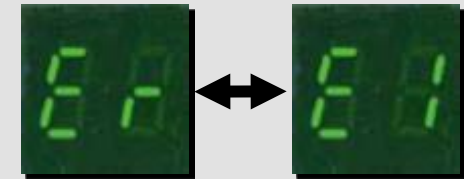

Communication error between outdoor or at least one indoor units and MIM-B02

No communication for 3 minutes

- Operation

1. First operation by contact input after power input (No operation before)
 - Auto mode, 24°C temperature setting, Auto fan speed, Stop airflow direction
2. Indoor unit operates in the last mode by other controllers by ON contact input.