



**SAMSUNG**

# SYSTEM AIR CONDITIONER

## INDOOR UNIT

AVXCSH022/028/036EE  
AVXC2H056/071EE  
AVXC4H045/056/071/090/112/128/140EE  
AVXC4H045/056/071/090/112/128/140EG  
AVXCMH028/036/056/060EE  
AVXDSH022/028/036/045/056/071/090/112/128/140EE  
AVXDUH056/071/090/112/128/140EE  
AVXDUH280EG  
AVXTFH056/071EE  
AVXTJH028/036/056EE  
AVXWBH028/036/056/071EE  
AVXWNH022/028/036/056/071EE  
AVXWVH022/028/036/056/071EE

## OUTDOOR UNIT

RVXVHT080/100/120/140/160GE  
RVXVHT080/100/120/140/160GG  
RVXVRT080/100/120/140/160GE

# ***SERVICE*** Manual

## AIR CONDITIONER



## CONTENTS

1. Precautions
2. Product Specifications
3. Disassembly and Reassembly
4. Troubleshooting
5. Exploded Views and Parts List
6. PCB Diagram and Parts List
7. Wiring Diagram
8. Schematic Diagram
9. Reference Sheet

Refer to the service manual in the GSPN(see the rear cover) for the more information.

# Contents

<b>1. Precautions</b> .....	1-1
1-1 Precautions for the Service .....	1-1
1-2 Precautions for the Static Electricity and PL .....	1-1
1-3 Precautions for the Safety .....	1-2
1-4 Others .....	1-2
<b>2. Product Specifications</b> .....	2-1
2-1 The Feature of Product .....	2-1
2-1-1 Feature .....	2-1
2-1-2 Changes in comparison to basic model .....	2-18
2-2 Product Specifications .....	2-19
2-2-1 Indoor Unit .....	2-19
2-2-2 Outdoor Unit .....	2-35
2-3 Accessory and Option Specifications .....	2-39
2-3-1 Accessories .....	2-39
<b>3. Disassembly and Reassembly</b> .....	3-1
3-1 Indoor Unit .....	3-2
3-2 Outdoor Unit .....	3-14
<b>4. Troubleshooting</b> .....	4-1
4-1 Setting Option Setup Method .....	4-1
4-1-1 PCB option code input method .....	4-1
4-1-2 Option Items .....	4-8
4-2 What to check before diagnosis .....	4-10
4-2-1 Lamp combination expression method display (cassette type indoor unit) .....	4-10
4-2-2 Numeric type display(outdoor unit, MCU, Wired remote controller, wall-mount type etc.) .....	4-22
4-3 How to take measures for each symptom .....	4-29
4-3-1 Outdoor unit operation flow .....	4-29
4-3-2 Indoor Unit ROOM sensor Error (Open/Short) .....	4-33
4-3-3 Indoor unit EVAP IN sensor Error (Open/Short) .....	4-34
4-3-4 Indoor EVAP OUT sensor Error (Open/Short) .....	4-35
4-3-5 Indoor heat exchanger's EVAP IN sensor dislocation error .....	4-36
4-3-6 Indoor Heat Exchanger's EVA OUT sensor dislocation error (Open/Short) .....	4-37
4-3-7 Simultaneous Indoor heat exchanger's EVA IN, OUT sensor dislocation error (Open/Short) .....	4-38
4-3-8 Operational error of indoor Unit's Clean Fan (Open/Short) .....	4-39
4-3-9 Breakdown of EEV (2 <sup>nd</sup> ) .....	4-40
4-3-10 Problem with EEV closure (2 <sup>nd</sup> ) .....	4-41
4-3-11 <i>E153</i> : Detection of Floating Switch of Indoor Unit's Drain Pump .....	4-42
4-3-12 The operational error of Indoor Unit's Fan Motor .....	4-43
4-3-13 Mixed operation Error (Only applicable to Heat Pump Model/Not to HR model) ...	4-44
4-3-14 EEPROM error .....	4-45
4-3-15 Option error of the Remote Controller for an Indoor Unit .....	4-46
4-3-16 Error due to confused use of Fahrenheit and Celsius .....	4-46

# Contents

4-3-17 Simultaneous opening of Cooling/heating MCU SOL Valves 1 <sup>st</sup> /2 <sup>nd</sup> .....	4-47
4-3-18 Error due to incorrect Indoor Unit Power/Communication Cable Connection ....	4-48
4-3-19 SPI Feedback Error .....	4-49
4-3-20 Outdoor Unit Pipe Test Error .....	4-50
4-3-21 Communication error between Indoor and Outdoor units during Tracking .....	4-51
4-3-22 Communication error between Indoor & Outdoor units after Completing Tracking .....	4-53
4-3-23 Communication error between Main and Sub Micoms of an Outdoor unit or among Outdoor Units .....	4-54
4-3-24 Communication error between MCU and Outdoor units .....	4-55
4-3-25 Communication error between MCU and Outdoor units after Completing Tracking ....	4-56
4-3-26 MCU branch part setup error – inconsecutive connection with the use of 2 branch parts ....	4-57
4-3-27 MCU branch part setup error – Repeated setup for the same address over 3 times .....	4-58
4-3-28 MCU branch part setup error – non-installed address setup .....	4-59
4-3-29 MCU branch part setup error – Number of Multiple MCUs setup error .....	4-60
4-3-30 MCU branch part setup error – Overlapping Indoor unit Address setup .....	4-61
4-3-31 MCU branch part setup error – Set as being used without connection to an Indoor unit .....	4-62
4-3-32 MCU branch part setup error – Connect an Indoor unit to a branch part not being used .....	4-63
4-3-33 MCU branch part setup error – Connect more Indoor units than what is actually set up in MCU ...	4-64
4-3-34 Outdoor Temperature Sensor error .....	4-65
4-3-35 Outdoor Temperature dislocation error .....	4-66
4-3-36 COND OUT Temperature Sensor error (Open/Short) .....	4-67
4-3-37 Outdoor COND OUT Sensor dislocation error .....	4-68
4-3-38 Discharge Temperature Sensor error for a digital Compressor (Open/Short) .....	4-69
4-3-39 Discharge Temperature Sensor error for a fixed scroll Compressor (Open/Short) ..	4-70
4-3-40 Compressor's Discharge Temperature Sensor dislocation error .....	4-71
4-3-41 E265 : Dislocation error of Compressor SUMP Temperature (oil temperature) Sensor ...	4-72
4-3-42 E269 : Dislocation error of Suction Temperature Sensor .....	4-73
4-3-43 SUMP Temperature Sensor error (Open/Short) .....	4-74
4-3-44 High Pressure Temperature Sensor error (Open/Short) .....	4-75
4-3-45 Low Ppressure Temperature Sensor error (Open/Short) .....	4-75
4-3-46 Oil Balance Valve Temp. Sensor error (Open/Short) .....	4-76
4-3-47 SUCTION Temperature Sensor error (Open/Short) .....	4-77
4-3-48 Double pipe temperature sensor error .....	4-78
4-3-49 Main Cooling Sol Valve Open Error .....	4-79
4-3-50 EVI IN Temperature Sensor error (Open/Short) .....	4-80
4-3-51 EVI OUT Temperature Sensor error (Open/Short) .....	4-81
4-3-52 E407 : Comp. Down due to a Protective Control of High pressure .....	4-82
4-3-53 E410 : Comp. Down due to a Protective Control of Low Pressure .....	4-83
4-3-54 Protection Control by Sump Sensor Error .....	4-84
4-3-55 E416 : Comp. Down due to Discharge Temperature Sensor of a Compressor .....	4-85
4-3-56 3 Detection of phase negative voltage sequence, Phase fail .....	4-86
4-3-57 E428 : Comp. Down due to compression rate control .....	4-87
4-3-58 E431 : Self-diagnosis of Oil valve (balance keeping valve) 1 (open or closure breakdown, sensor dislocation or defect) .....	4-88
4-3-59 EVI EEV Open Error .....	4-89
4-3-60 E440, E442 : Prohibition of the operation of Compressor due to OoutdoorTemperature .....	4-90
4-3-61 High Pressure below the Average before Cooling (Unable to Restart) .....	4-91
4-3-62 Instantaneous Blackout .....	4-92
4-3-63 Error by High Temperature in an Outdoor Fan Motor .....	4-92
4-3-64 RPM Error of an Outdoor Fan Motor .....	4-92

# Contents

4-3-65 Over-Voltage Error of an Outdoor Fan Motor .....	4-93
4-3-66 Counter-Rotation Error of an Outdoor Fan Motor .....	4-93
4-3-67 E458 : Over-voltage error of Compressor .....	4-94
4-3-68 E461 : Low-amperage error of Compressor .....	4-95
4-3-69 Liquid Compressor Protection Control .....	4-96
4-3-70 Breakdown of an EEV(1 <sup>st</sup> ) .....	4-97
4-3-71 Breakdown of an EEV closure (1 <sup>st</sup> ) .....	4-98
<b>5. Exploded Views and Parts List .....</b>	<b>5-1</b>
5-1 Indoor Unit .....	5-1
5-1-1 Slim 1 way cassette type .....	5-1
5-1-2 2 way cassette type .....	5-7
5-1-3 4 way cassette type .....	5-11
5-1-4 Mini 4 way cassette type .....	5-21
5-1-5 Duct type(Slim I) .....	5-25
5-1-6 Duct type(Slim II) .....	5-27
5-1-7 Duct type(Slim III) .....	5-29
5-1-8 Duct type(MSP) .....	5-31
5-1-9 Duct type(SUPER) .....	5-39
5-1-10 Ceiling type .....	5-43
5-1-11 Console type .....	5-47
5-1-12 Wall-mounted type(Montblanc) .....	5-49
5-1-13 Wall-mounted type(Neo Forte) .....	5-53
5-1-14 Wall-mounted type(Vivace) .....	5-57
5-2 Outdoor Unit .....	5-61
5-2-1 RVXVHT080/100/120GE, RVXVHT080/100/120GG .....	5-61
5-2-2 RVXVHT140/160GE, RVXVHT140/160GG .....	5-65
5-2-3 RVXVRT080/100/120GE .....	5-69
5-2-4 RVXVRT140/160GE .....	5-73
<b>6. PCB Diagram .....</b>	<b>6-1</b>
6-1 Indoor Unit .....	6-1
6-1-1 Slim 1 way cassette type .....	6-1
6-1-2 2 way cassette type .....	6-3
6-1-3 4 way cassette type .....	6-5
6-1-4 Mini 4 way cassette type .....	6-6
6-1-5 Duct type(Slim) .....	6-7
6-1-6 Duct type(MSP) .....	6-11
6-1-7 Duct type(SUPER) .....	6-13
6-1-8 Ceiling type .....	6-14
6-1-9 Console .....	6-15
6-1-10 Wall-mounted type(Montblanc) .....	6-17
6-1-11 Wall-mounted type(Neo Forte) .....	6-21
6-1-12 Wall-mounted type(Vivace) .....	6-25
6-2 Outdoor Unit .....	6-29
6-2-1 MAIN PCB .....	6-29
6-2-2 BLDC .....	6-31
6-2-3 Filter PCB .....	6-32
6-2-4 CT PCB .....	6-33
6-2-5 MCU .....	6-34

# Contents

<b>7. Wiring Diagram</b> .....	7-1
7-1 Indoor .....	7-1
7-1-1 Slim 1way cassette type .....	7-1
7-1-2 2way cassette type .....	7-2
7-1-3 4way cassette type .....	7-3
7-1-4 Mini 4way cassette type .....	7-4
7-1-5 DUCT type(Slim I, II) .....	7-5
7-1-6 DUCT type(Slim III) .....	7-6
7-1-7 DUCT type(MSP) .....	7-7
7-1-8 DUCT type(SUPER) .....	7-8
7-1-9 Ceiling .....	7-9
7-1-10 Console .....	7-10
7-1-11 Wall Mounted type(Montblanc) .....	7-11
7-1-12 Wall Mounted type(Neo Forte) .....	7-12
7-1-13 Wall Mounted type(Vivace) .....	7-13
7-1-14 Distributor kit .....	7-14
7-2 Outdoor Unit .....	7-15
7-2-1 Outdoor .....	7-15
7-2-2 MCU .....	7-16
<b>8. Schematic Diagram</b> .....	8-1
8-1 Indoor Unit .....	8-1
8-1-1 Slim 1 way cassette type .....	8-1
8-1-2 2 way cassette type .....	8-3
8-1-3 4 way cassette type .....	8-4
8-1-4 Mini 4 way cassette type .....	8-5
8-1-5 Duct type(Slim, MSP) .....	8-6
8-1-6 Duct type(SUPER) .....	8-7
8-1-7 Ceiling type .....	8-8
8-1-8 Console type .....	8-9
8-1-9 Wall-mounted type(Montblanc) .....	8-12
8-1-10 Wall-mounted type(Neo Forte/Vivace) .....	8-13
8-2 Outdoor Unit .....	8-14
8-2-1 MAIN PCB 1 .....	8-14
8-2-2 MAIN PCB 2 .....	8-15
8-2-3 BLDC PCB .....	8-16
8-2-4 Filter PCB .....	8-17
8-2-5 CT PCB .....	8-18
<b>9. Reference Sheet</b> .....	9-1
9-1 Index for Model Name .....	9-1
9-1-1 Indoor Unit .....	9-1
9-1-2 Outdoor Unit .....	9-2
9-2 Refrigerant Circuit Diagram .....	9-3
9-2-1 Cycle Operation Mode .....	9-3



**GSPN(Global Service Partner Network)**

Area	Web Site
North America	<a href="http://service.samsungportal.com">http://service.samsungportal.com</a>
Latin America	<a href="http://latin.samsungportal.com">http://latin.samsungportal.com</a>
CIS	<a href="http://cis.samsungportal.com">http://cis.samsungportal.com</a>
Europe	<a href="http://europe.samsungportal.com">http://europe.samsungportal.com</a>
China	<a href="http://china.samsungportal.com">http://china.samsungportal.com</a>
Asia	<a href="http://asia.samsungportal.com">http://asia.samsungportal.com</a>
Mideast & Africa	<a href="http://mea.samsungportal.com">http://mea.samsungportal.com</a>

This Service Manual is a property of Samsung Electronics Co., Ltd.  
Any unauthorized use of Manual can be punished under applicable  
International and/or domestic law.

© Samsung Electronics Co., Ltd. Dec. 2009.  
Printed in Korea.  
Code No. DB98-29550A(6)