



SYSTEM AIR CONDITIONER

Basic: DH140EAV/UH140GAV

Model: DH090/105/140EAV/DH105EAS/DH052/070EAV1

UH090/105/140EAV/UH105EAS/UH052/070EAV1

Model Code : DH090/105/140EAV/DH105EAS/DH052/070EAV1

UH090/105/140EAV/UH105EAS/UH052/070EAV1

SERVICE *Manual*

AIR CONDITIONER



DH052/070EAV1
DH090/105EAV
DH105EAS



DH140EAV



UH052EAV1



UH070EAV1



UH090/105/140EAV
UH105EAS

THE FEATURE OF PRODUCT

Refer to the service manual in the GSPN(see the rear cover) for the more information.

Contents

1. Precautions	1-1
1-1 Installing the air conditioner	1-1
1-2 Power supply and circuit breaker	1-1
1-3 During operation	1-2
1-4 Disposing of the unit	1-2
1-5 Others	1-2
2. Product Specifications	2-1
2-1 The Feature of Product	2-1
2-2 Product Specifications	2-2
2-3 The Comparative Specifications of Product	2-7
2-4 Accessory and Option Specifications	2-8
3. Disassembly and Reassembly	3-1
3-1 Indoor Unit	3-2
3-2 Outdoor Unit	3-7
4. Trouble shooting	3-1
4-1 Indoor Display Error and Check Method	4-1
4-2 Outdoor LED Error Display and Check Method	4-4
4-3 Setting Option Setup Method	4-5
4-4 Items to be checked first	4-17
4-5 Fault Diagnosis by Symptom	4-18
4-6 PCB Inspection Method	4-35
4-7 Main Part Inspection Method	4-37
5. Exploded Views and Parts List	5-1
5-1 Indoor Unit	5-1
5-2 Outdoor Unit	5-9
5-3 Assy control out	5-15
6. PCB Diagram and Parts list	6-1
6-1 PCB Diagram	6-1
6-2 PCB Parts list	6-9
7. Wiring Diagram	7-1
8. Schematic Diagram	8-1
8-1 Indoor Unit	8-1
8-2 Outdoor Unit	8-2
9. Reference Sheet	9-1
9-1 Refrigerating Cycle Diagram	9-1
9-2 Index for Model Name	9-2