

11. Operating Instructions

11-1 Name of Each Part


11-1-1 Indoor Unit

The figures are shown in this instruction may differ from yours depending on the model.

■ EH035EAV1

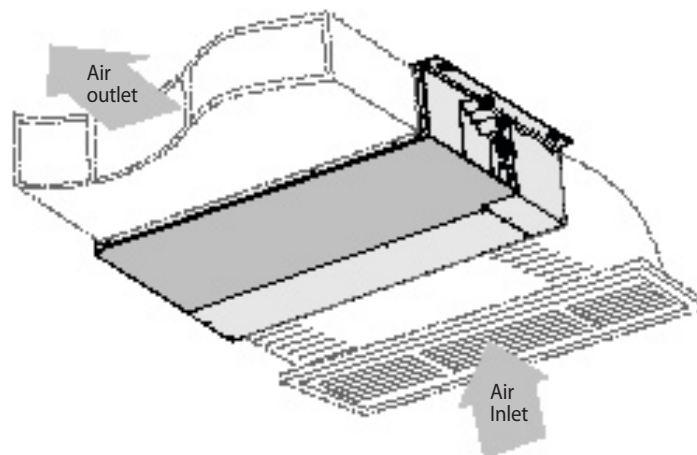


■ EH052EAV1/EH070EAV1

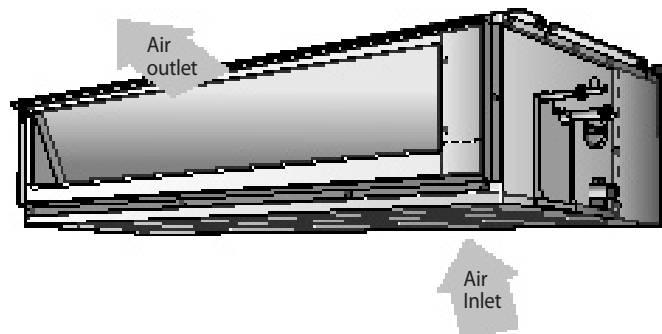


11-1-2 Outdoor Unit


■ UH035EAV1

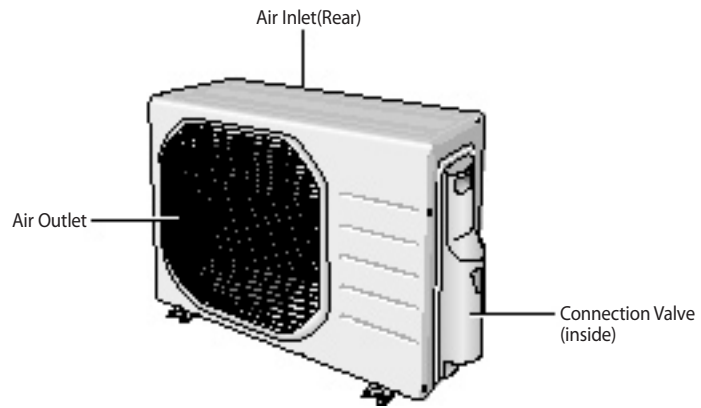

■ UH052EAV1

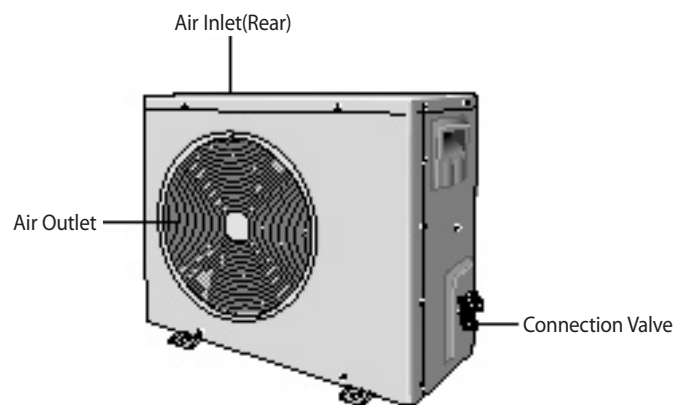

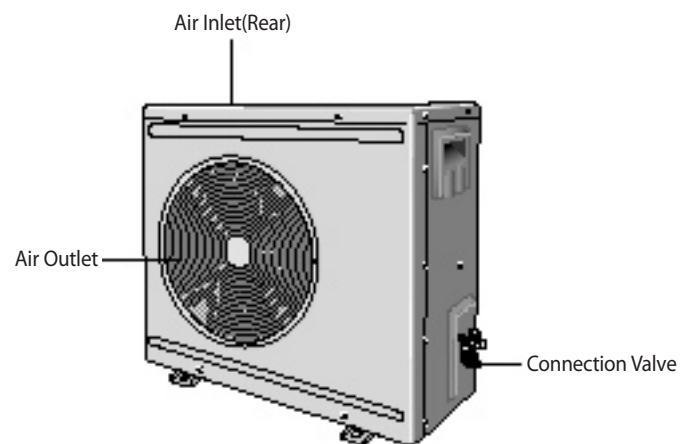


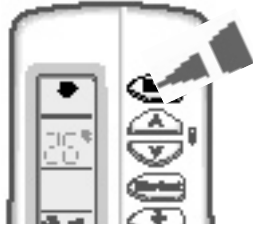










■ UH070EAV1





 













 


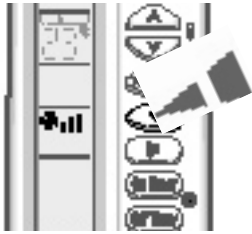







11-2 Main Function







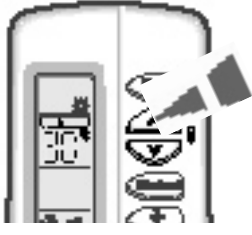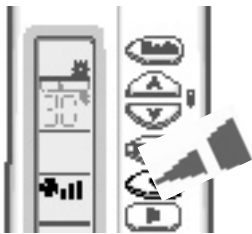








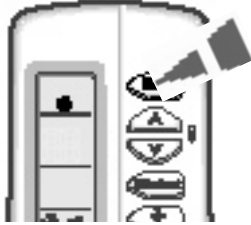

11-2-1 Basic Function

Mode	Explanation	Remark
<p>Selecting the Automatic Operating Mode</p>	<p>1. If necessary, press  (On/Off) button.</p> <p>2. To select the AUTO mode, press the  button until  is displayed at the top of the wireless remote controller.</p> <p>3. To adjust the temperature, press the  buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.</p>	  
<p>Cooling Your Room</p>	<p>1. If necessary, press  (On/Off) button.</p> <p>2. To select the COOL mode, press the  button until  is displayed at the top of the wireless remote controller.</p> <p>3. To adjust the temperature, press the  buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.</p>	  

















Basic Function(cont.)



























Mode	Explanation	Remark
	<p>4. Select the fan speed by pressing the  button one or more times until the intended value is displayed :</p> <p> Automatic(rotated :    )</p> <p> Low</p> <p> Medium</p> <p> High</p>	
<p>Heating Your Room (Except cooling only models)</p>	<p>1. If necessary, press  (On/Off) button.</p> <p>2. To select the HEAT mode, press the  button until  is displayed at the top of the wireless remote controller.</p> <p>3. To adjust the temperature, press the  buttons one or more times until the required temperature is displayed. Possible temperatures are between 16°C and 30°C inclusive.</p> <p>4. Select the fan speed by pressing the  button one or more times until the intended value is displayed :</p> <p> Automatic(rotated :    )</p> <p> Low</p> <p> Medium</p> <p> High</p>	   



















Basic Function(cont.)

Mode	Explanation	Remark
<p>Removing Excess Humidity</p>	<p>1. If necessary, press  (On/Off) button.</p> <p>2. To select the DRY mode, press the  button until  is displayed at the top of the wireless remote controller.</p> <p>3. To adjust the temperature, press the  buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.</p>	  
<p>Airing Room</p>	<p>1. If necessary, press  (On/Off) button.</p> <p>2. To select the FAN mode, press the  button until  is displayed at the top of the wireless remote controller.</p> <p>3. Select the fan speed by pressing the  button one or more times until the intended value is displayed:</p> <ul style="list-style-type: none">  Low  Medium  High 	  


11-2-2 Wired Remote Controller

Mode	Explanation	Remark
<p>Selecting the Automatic Operating Mode</p>	<p>1. If necessary, press  (ON/OFF) button.</p> <p>2. To select the AUTO mode, press the  button until  is displayed at the top of the wired remote controller.</p> <p>3. To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.</p>	  
<p>Cooling Your Room</p>	<p>1. If necessary, press  (ON/OFF) button.</p> <p>2. To select the COOL mode, press the  button until  is displayed at the top of the wired remote controller.</p> <p>3. To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.</p>	  


Mode	Explanation	Remark
<p>Cooling Your Room</p>	<p>4. Select the fan speed by pressing the  button one or more times until the intended value is displayed :</p> <p> Automatic (rotated :   )</p> <p> Low</p> <p> Medium</p> <p> High</p>	
<p>Heating Your Room (Except cooling only models)</p>	<p>1. If necessary, press  (On/Off) button.</p> <p>2. To select the HEAT mode, press the  button until  is displayed at the top of the wireless remote controller.</p> <p>3. To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 16°C and 30°C inclusive.</p> <p>4. Select the fan speed by pressing the  button one or more times until the intended value is displayed :</p> <p> Automatic (rotated :   )</p> <p> Low</p> <p> Medium</p> <p> High</p>	   



Mode	Explanation	Remark
<p>Removing Excess Humidity</p>	<p>1. If necessary, press  (ON/OFF) button.</p> <p>2. To select the DRY mode, press the  button until  is displayed at the top of the wired remote controller.</p> <p>3. To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.</p>	  
<p>Airing Your Room</p>	<p>1. If necessary, press  (ON/OFF) button.</p> <p>2. To select the FAN mode, press the  button until  is displayed at the top of the wired remote controller.</p> <p>3. Select the fan speed by pressing the  button one or more times until the intended value is displayed:</p> <ul style="list-style-type: none">  Low  Medium  High 	  

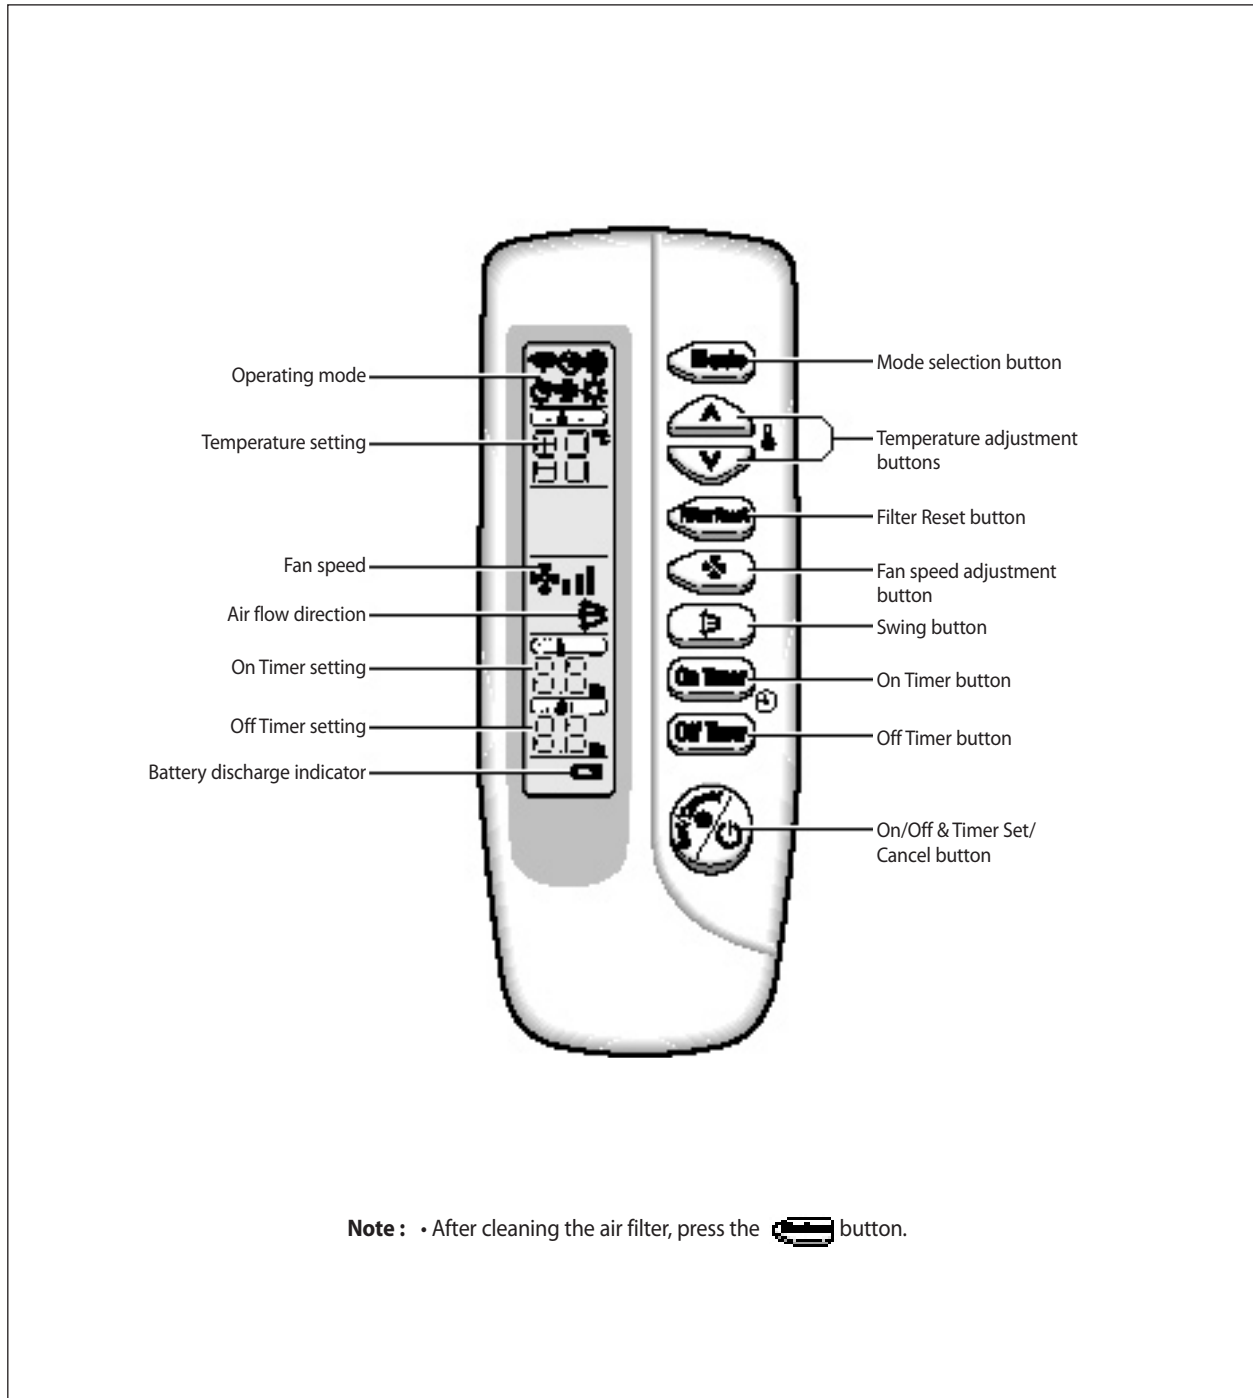11-3 Wireless Remote Control-Buttons and Display

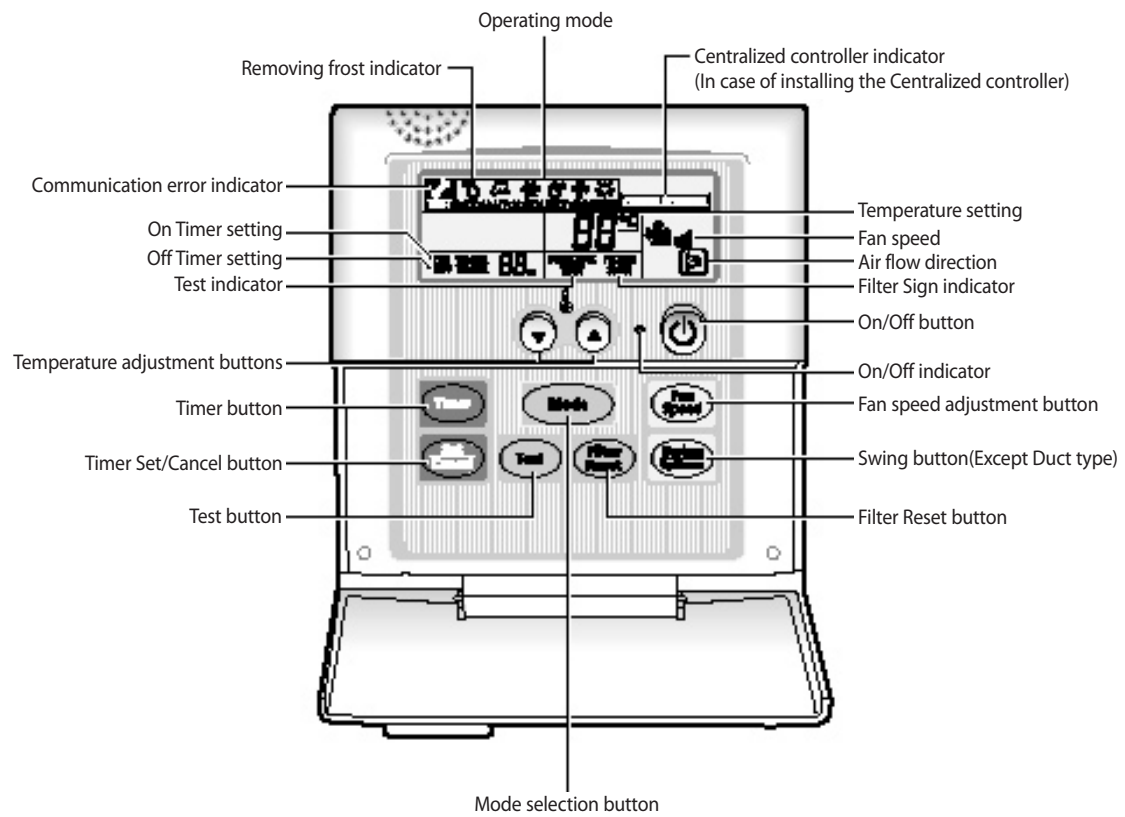

11-4 Wired Remote Controller-Buttons and Display



- Note :**
- The  button is for your installation specialist. You must not press it.
 - After cleaning the air filter, press the  button. Then the wired remote controller will display the Filter Sign indicator when the time to clean the air filter.