


**SAMSUNG**

**INSTALLATION MANUAL  
MANUAL DE INSTALACIÓN  
MANUEL D'INSTALLATION  
MANUALE D'INSTALLZIONE  
MANUAL DE INSTALAÇÃO  
INSTALLATIONS-HANDBUCH  
ΕΓΧΕΙΡΙΔΙΟ ΕΓΚΑΤΑΣΤΑΣΗΣ  
ИНСТРУКЦИЯ ПО УСТАНОВКЕ**

**7-day Scheduler  
MWR-BS00**

**System Air Conditioner  
Aire acondicionado sistemático  
Climatiseur numérique multifonctionnel  
Sistema Aria Condizionata  
Sistema Ar Condicionado  
Klimaanlage System  
Σύστημα Κλιματισμού  
Системный Воздушный Кондиционер**

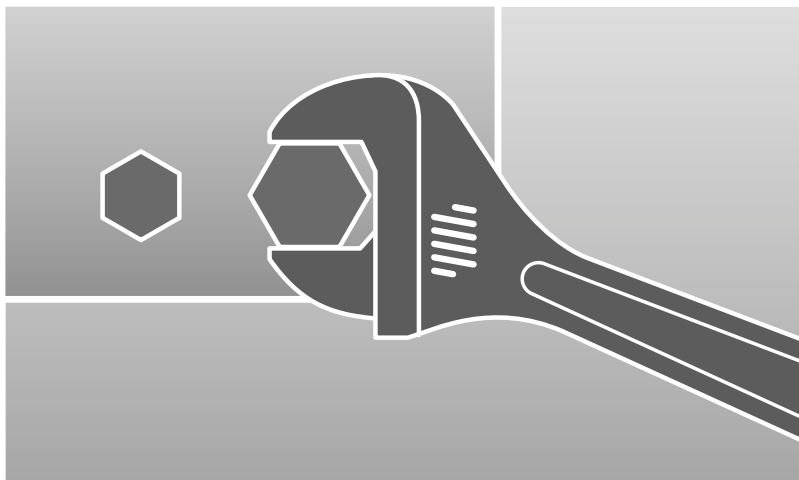

ENGLISH

ESPAÑOL

FRANÇAIS

ITALIANO

PORTUGUÊS

DEUTSCH

ΕΛΛΗΝΙΚΑ

RUSSIAN

# Safety Precautions

*This installation manual explains how to install the 7-day Scheduler.  
See the appropriate installation manual for other optional accessories.*

---



## **WARNING**

- ◆ Read this installation manual carefully before installation and check whether the 7-day Scheduler is installed properly.
- ◆ Do not attempt to install or repair the 7-day Scheduler by yourself.
- ◆ Always consult an authorized service personnel for repair.
- ◆ When moving, consult an authorized service personnel for disconnection and reinstallation of the 7-day Scheduler.
- ◆ Ensure that the wall is strong enough to support the weight of the 7-day Scheduler.
- ◆ The 7-day Scheduler must be installed with the rated power supply.
- ◆ The 7-day Scheduler must be installed according to the national electrical rules by an installation specialist.
- ◆ Consult an authorized installation center on how to dispose the 7-day Scheduler.



## **CAUTION**

- ◆ Do not use inflammable gases near the 7-day Scheduler.
- ◆ Do not install the 7-day Scheduler in a location where it will come into contact with combustible gases, machine oil, sulphide gas, etc.
- ◆ Avoid a location where acid/alkali solution or special spray is used.
- ◆ Install the 7-day Scheduler in a location that is not exposed to direct sunlight and where the temperature range is between 0°C and 39°C.
- ◆ Do not let water into the 7-day Scheduler.
- ◆ Do not apply pressure to the cable. The cable may break and cause fire.
- ◆ Do not press the buttons with a sharp object.
- ◆ Do not connect the power cable to the control terminal.
- ◆ Ensure that the 7-day Scheduler does not affect other electronic devices when installed in a hospital or other particular places.

# Contents

---






- ◆ **7-DAY SCHEDULER AND ACCESSORIES** ..... 4
- ◆ **CONNECTING TO THE WIRED REMOTE CONTROL** ..... 5
- ◆ **CONNECTING TO THE CENTRALIZED CONTROLLER** ..... 6
- ◆ **SETTING UP THE OPTION SWITCHES OF  
THE 7-DAY SCHEDULER PCB** ..... 7

## 7-day Scheduler and Accessories

### Accessories

*The following accessories are supplied with the 7-day Scheduler.*

> The number of each accessory is indicated in parentheses.

Cable-tie (2) 	Cable clamp (2) 	M4x16 tapped screw (4) 	User's manual (1) 	Installation manual (1) 
--	--	---	--	--

#### **CAUTION**




- ◆ *The 7-day Scheduler must be installed by an installation specialist.*
- ◆ *Ensure the main power is off before installing the 7-day Scheduler.*
- ◆ *All cables must be installed according to the national wiring regulation and make sure the wires are installed inside the wall to avoid user contact.*

## Connecting to the Wired Remote Control


- 1 Open the wired remote control by using the groove on the top.
- 2 Open the 7-day Scheduler by using the groove on the top.
- 3 Secure the rear cover of the 7-day Scheduler on the wall with 2 screws.
- 4 Connect each 7-day Scheduler terminal F3, F4 to the wired remote control terminal F3, F4.
- 5 Connect each 7-day Scheduler terminal V1, V2 to the wired remote control terminal V1, V2.
- 6 Reassemble the 7-day Scheduler and the wired remote control.

### CAUTION

- ◆ *The communication cable and the power cable should be installed separately when installing the 7-day Scheduler and the wired remote control. (Connecting the power cable to the communication terminal will cause serious damage to the 7-day Scheduler)*

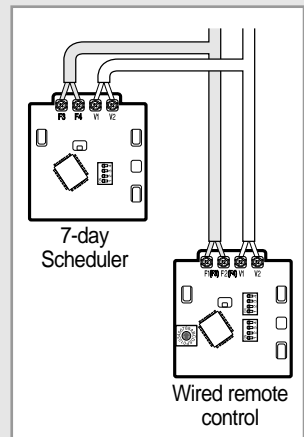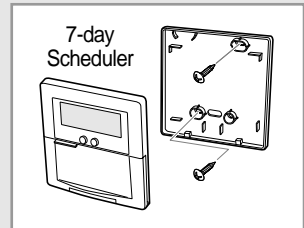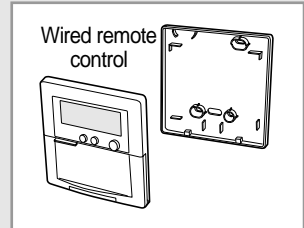


## Connecting to the Centralized Controller

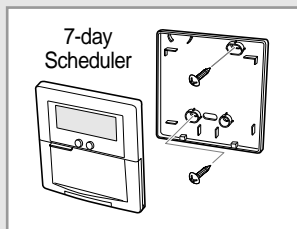

1 Open the 7-day Scheduler by using the groove on the top.


2 Secure the rear cover of the 7-day Scheduler on the wall with 2 screws.

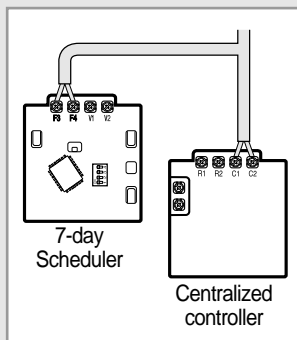

3 Connect each 7-day Scheduler terminal F3, F4 to the centralized controller terminal C1, C2.

4 Connect the 7-day Scheduler terminal V1, V2 using a separate 12V adapter.

5 Reassemble the 7-day Scheduler.

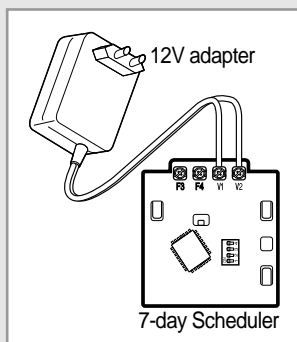

### CAUTION

- ◆ *The 7-day Scheduler can be used with the MCM-A201 centralized controller only. The 7-day Scheduler will not function if used with the MCM-A200 centralized controller.*

## Setting up the Option Switches of the 7-day Scheduler PCB

- ◆ Assign the DIP switch of the 7-day Scheduler according to the user's environment.

DIP switch No.	Switch OFF	Switch ON
SW1		
SW2	Enables the use of the wired remote control	Disables of the [On/Off] button on the wired remote control
SW3		
SW4		

### CAUTION

- ◆ *If SW2 is set to ON, only the On/Off button of the wired remote control is disabled.*

